

Compliance & Safeworking

Train Operating Data

NA_NSP_02.15 - R03-2023

BENDIGO TO PIANGIL

BROAD GAUGE

1. CLASS OF LOCOMOTIVE AND PERMITTED SPEEDS (KM/H)

		CLASS OF LOCOMOTIVE					
		G, XR, BL	A, B, GM, N, S, X	H, P, T	Υ	Sprinter/ Vlocity	
BENDIGO and NORTH BENDIGO JUNCTION	Freight Pass	65 65	85 80	65 80	65 	 80	
NORTH BENDIGO JUNCTION and EAGLEHAWK	Freight Pass	65 65	65 65	65 65	65 	 80	
EAGLEHAWK and Wellington St PCR (288.634km) at KERANG	Freight Pass	65 65	80 100	80 100	65 		
Wellington St (288.634km) and Victoria St (289.839km) PCRs at KERANG	Freight Pass	65 65	80 80	80 80	65 		
Victoria St PCR (289.839km) at KERANG and Bryan St PCR (343.949) at SWAN HILL)	Freight Pass	65 65	80 90	80 90	65 		
Bryan St PCR (343.949km) at SWAN HILL	Freight Pass	65 65	80 80	80 80	65 		
SWAN HILL and PIANGIL	Freight	50	50	50	50		

2. SPECIAL SPEED RESTRICTIONS

 Pyramid - A Notice Board is provided at the UP end of Pyramid Station advising that the Maximum Speed for UP Stopped Trains to Victoria Street level crossing PCR (249.088km) is not to exceed 40 kph.

MAXIMUM SPEED TO CROSSING 40 kph

Kerang - A Notice Board is provided at the UP end
of Kerang Station advising that the Maximum
Speed for UP Trains to Wellington Street
level crossing PCR (288.634km) is not to
exceed 50 kph. The notice board is provided on the Down Side of the line.

MAXIMUM SPEED TO WELLINGTON ST 50kph

Kerang - A Notice Board is provided at the DOWN end
of Kerang Station advising that the Maximum
Speed for UP Trains to Wellington Street
level crossing PCR (288.634km) is not to
exceed 50 kph. The notice board is provided on the Down Side of the line.

MAXIMUM SPEED TO WELLINGTON ST 50kph

4. The following wagon types are permitted to be loaded to 80t gross between Swan Hill and Piangil, where loaded to 80t gross, the following maximum speed applies to the whole consist not withstanding any lower Network Service Plan speeds and Temporary Speed Restrictions that may apply.

BGKF.

SWAN HILL and PIANGII	Freight	40

All trains are restricted to 30 km/h when passing over points at WOORINEN A.W.B. OUT LOADING FACILITY & NYAH WEST



Compliance & Safeworking

Train Operating Data

NA_NSP_02.15 - R03-2023

BENDIGO TO PIANGIL

BROAD GAUGE

			3	. RU	JLING (SRADE I	LOADS	(TONNE	S)				
SECTION	I							COMOTIVI	•				
SECTION	G, XR, BL	N	GM, S, X	Mod A Class	Non- Mod A solo or multi with A	Non- Mod A multi with other class	В	H solo or multi with H, P, T or Y	H multi with other class	T or P solo or multi with H, P, T or Y	T or P multi with other class	Y solo or multi with T, Y, H or P	Y multi with other class
DOWN													
Bendigo to EAGLEHAWK		1420	1420	1420	1205	1205	1015	760	760	760	760	510	510
RAYWOOD		1625	1625	1670	1420	1420	1420	1015	1015	1015	1015	610	610
SWAN HILL		1830	1830	2060	1830	1830	1830	1420	1420	1420	1420		
WOORINEN								1625	1625	1625	1625	1270	1270
PIRA								1015	1015	1015	1015		
PIANGIL	2150	1660	1660	1660	1430	1430	1430	1220	1220	1220	1220	815	815
UP													
Piangil to WOORINEN				2402				1420	1420	1420	1420	915	915
SWAN HILL	3800	3420	3195	3420	3195	3195	3195	1625	1625	1625	1625		
KERANG				0000				1420	1420	1420	1420		
RAYWOOD	4000	2030	2030	2200	2030	2030	2030	1830	1830	1830	1830	1270	1270
EAGLEHAWK		1220	1220	1220	1035	1035	965	760	760	760	760		
BENDIGO	1750	1420	1420	1420	1220	1220	1220	865	865	865	865	610	610

4. SAFEWORKING SYSTEMS

Automatic Block Signalling is in force between BENDIGO and NORTH BENDIGO JUNCTION controlled from a Visual Display Unit located at CENTROL.

	STATUS – ATTENDED	STATUS – UNATTENDED
NORTH BENDIGO	Train Order Terminal Station	Attended for all Trains
WOODVALE BLOCK POINT	Block Point Location	Block Point Location
HOPES BLOCK POINT	Block Point Location	Block Point Location
KERANG	Attended Crossing Station	Intermediate Train Order Station
SWAN HILL	Intermediate Terminal Station	Intermediate Terminal Station
PIANGIL	Unattended location	Unattended Train Order Terminal Station

Train Order Working is in force between NORTH BENDIGO and PIANGIL.

A Proceed and Return Train Order may be issued between NORTH BENDIGO to EAGLEHAWK PLATFORM.

A Proceed and Return Train Order may be issued between SWAN HILL and PIANGIL.

Train Operating Data

NA_NSP_02.15 - R03-2023

Page 3 of 5

BENDIGO TO PIANGIL

BROAD GAUGE

SPECIAL NOTES

BENDIGO - NORTH BENDIGO

Track Circuits for the operation of the Level Crossings and Signalling between KP 161.841 on the Up side of Bendigo, KP 166.120 on the Down side of Signal BDG34 and at Signal BDG36 is operated by Axle Counter equipment and provision of Counting Head Control Equipment as described in Section 34-133.

EAGLEHAWK

For local operation of Up Home Signal EAG10 in addition to key switch at Up end of the Station Platform advisory signs are fitted to the Signal Post. - EAG10 - SIG CON 1

Operation of this equipment is described in Section 34 – 137.

DINGEE

For local operation of Up Automatic Signal in addition to key switch at Up end of the Station Platform advisory signs are fitted to the Signal Post. - Up Automatic Signal - SIG CON 1

Operation of this equipment is described in Section 34 – 137.

KERANG

For local operation of Signals KER4 and KER36 in addition to key switches at respective end of the Station Platform advisory signs are fitted to the respective Signal Post and at each end of the Station Platform .

KER4 - SIG CON 1, KER36 - SIG CON 2.

Operation of this equipment is described in Section 34 – 137.

DISTANCES FROM MELBOURNE AND CLEAR LENGTH OF CROSSING ROADS

LOCATION	MARKED DISTANCE FROM	PLATFORM LENGTH			CLEA	AR LENGTH OF CROSSING ROADS (LENGTH IN METRES)
	MELBOURNE (KM)	NO 1	NO 2	NO. 1	NO. 2	
BENDIGO	162.242	240	258			
NORTH BENDIGO JUNCTION	164.218					
EAGLEHAWK	170.106	181				
WOODVALE BLOCK POINT	181.000					
RAYWOOD	192.884	180				
TANDARRA	204.410					
DINGEE	211.337	72				
HOPES BLOCK POINT	216.000					
MITIAMO	229.094					
PYRAMID	249.350	77				No 2 - 258 metres access from Dn End - Maintenance Use Only Currently Booked Out
KERANG *	288.886	110			498	No 2 only access from Dn End - No 3 - 246
LAKE BOGA	330.078					100 metres access from Up End – Maint Sdg
SWAN HILL	345.287	122		370	370	No 3 – 278, No 4 – 206, No 5, No 6 – 160.
WOORINEN	357.156					
WOORINEN A.W.B.	358.571					
OUT LOADING FACILITY						
PIRA	366.350					
NYAH WEST	374.160					Siding - 489
MIRALIE	383.073					
PIANGIL	389.450			450	450	Down end Ext 185

Note * No 5 Road and the Silo Road at KERANG are closed to all traffic. These Sidings are not available for any Rail Operations.

7. TRACK CLASS

Track is maintained to the following class standards.

SECTION CLASS

NETWORK SERVICE PLAN

Print Date: Monday, 18 December 2023; Printed copies are uncontrolled OFFICIAL Sensitive



Compliance & Safeworking

Train Operating Data

NA_NSP_02.15 - R03-2023

BENDIGO TO PIANGIL

BROA	D GAUGE		
	BENDIGO – SWAN HILL	162.240 km – 345.300 km	CLASS 3
	SWAN HILL – PIANGIL		CLASS 4

NAME AND KMS OF NEAREST STATION	LEVEL CROSSING	DISTANCE (KM)	TYPE	LOCATION NUMBER	VICROAD ID NO.
BENDIGO – 162.242		162.572	BB	M1625	
		162.837	ВВ	M1628	
		164.117	BB	M1641	
	¢♣ Midland Highway	164.700	BB	YK1647	7283
	,	165.028	ВВ	YK1650	
	Weeroona Avenue Thursday Street	165.312	BB	YK1653	
EAGLEHAWK – 170.106		166.660	BB	YK1666	
LAGLETIAWN = 170.100	£ Holdsworth Road	167.477	BB	YK1674	
	£ Nelson Street	168.399	BB	YK1683	
		169.669	BB	YK1696	
	Market Street	169.906	PG EGL		
	Hopkins Avenue	171.515	FL	YK1699 Y1715	
	* Marong Road	171.515 173.153	BB	Y1731	
	_	173.461	BB	Y1734	19001
	*♣ Loddon Valley Highway Ω Rileys Road	177.903	BB	Y1779	19001
RAYWOOD – 192.884	* Bridgewater Road	185.129	ВВ	Y1851	
	* Sebastian Road	186.136	BB	Y1861	
	* Bridgewater – Raywood Road	191.571	ВВ	Y1915	
	* Inglewood Street	192.749	ВВ	Y1927	
DINIOSE 044 007					
DINGEE – 211.337	Ω Sepentine Road	204.615	BB	Y2046	
	Evans Street	211.132	BB	Y2111	
	* Prairie Road	219.108	BB	Y2191	
MITIAMO – 229.094	* Sepentine Road	226.381	ВВ	Y2263	
	* Bendigo – Pyramid Road	228.859	ВВ	Y2288	
PYRAMID - 249.350	* Victoria Street	249.088	FL	Y2493	
	* Macorna Road	266.108	ВВ	Y2661	
	* Tragowel Road	274.225	ВВ	Y2742	
KERANG – 288.886	*Old Echuca Road	283.620	ВВ	Y2836	
	*♣ Murray Valley Highway	285.313	BB	Y2853	7288
	* Airport Road	287.287	ВВ	Y2872	
	*Ⅲ Mitchell Street	287.831	ВВ	Y2878	
	I Wellington Street	288.634	ВВ	Y2886	
	I Vaughan Street	289.380	BB	Y2893	
		289.839	BB	Y2898	
		290.474	BB	Y2904	
	* Murray Valley Highway	294.399	ВВ	Y2943	7246
	Ω Fairley Road	296.774	BB	Y2964	
	Ω B McCann Road	303.096	BB	Y3030	
LAKE BOGA – 330.078	Ω Lake Charm Road	316.361	BB	Y3163	
	Ω Tresco Road	324.431	BB	Y3244	
	Old Lalbert Road	329.848	FL	Y3298	
	Station Street	330.420	FL 	Y3304	
	* Long Lake Road	332.675	BB	Y3326	=000
	* Murray Valley Highway	336.567	BB	Y3365	7289
SWAN HILL – 345.287	I Pental Island Road	343.246	BB	Y3432	
		343.949	BB	Y3439	
	☐ Gray Street	344.417	BB	Y3444	
	I McCallum Street	345.660	BB	Y3456	40000
	Murray Valley Highway	347.221	BB	Y3472	19002

BB – Boom Barriers VIC – Victorian Broad Gauge CC – Crib Crossing SG – Standard Gauge

FL – Flashing Lights

PG – Pedestrian Gates EGL – Electric Gate Latches



Train Operating Data

NA_NSP_02.15 - R03-2023

BENDIGO TO PIANGIL

BROAD GAUGE

- Note * Indicates those level crossings where an increase in speed may be permitted if the train is travelling at or above 50km/h upon passing the predictor indicator board.
 - At these level crossings indicated above operated with Level Crossing Predictors, the Predictor boards will be placed in accordance with Rule 9 (Section 36) of the Book of Rules and Operating Procedures.
- Note ♠ Level crossing fitted with VicRoads Active Advance Warning Signs. Warning sign faults are to be reported to the VicRoads Fault Centre on 131170.
- Note Ω Indicates those level crossings are operated through Axle Counter Equipment. Reset of this equipment will be in accordance with, Procedure 34 133 Axle Counter Level Crossing Reset Procedure from Section 34 of Book of Rules and Operating Procedures
- Note I Indicates that Road / Rail Vehicles are not permitted to On or Off Track at this level crossing.
- Note £ Indicates those level crossings are operated through Axle Counter Equipment and local reset of Island Track is provided in accordance with Operating Procedure No. 34-133. (Modified Location).
- Note

 Indicates those level crossings are operated through Axle Counter Equipment within a defined area fitted with Counting Head Control which is described in Operating Procedure No. 34-133. (Rules 8 to 15).